USER MANUAL

HDMI 200M IP EXTENDER

Enjoy the vivid world

Introduction

200m HDMI Matrix Extender over IP is a device based on the standard TCP/IP protocol for transmitting HD audio and video source over LAN. It transmits your HD display with the high resolutions up to 200 meters away from your HDMI or DVI-D source by using one CAT5e/6 cable. At the same time, it's also convenient to transmit HDMI audio and video source by point-to-point, multipoint-to-multipoint and cascade connection mode.



Features

- * Support HDMI 1.3/HDCP1.1 & 1.2
- * Support point-to-point mode, multi point-to-multi point mode and cascade connection mode.
- * 802.3 Ethernet standard.
- * Support IR remote control.
- * The design of pure hardware, plug and play, no need for additional software.


Specifications

HDMI version. HDTV resolutions. Audio. IR remote control. Power adapter	
Power adapter	DC:5V/1A


The max power consumption Size(L-W-H) Weight			163*87*24mm 474g x 2	
Operating temperature/humidity Storage temperature/humidity				
Physical interface diagram				
HDMI Transmitter				
Hami° H.264 Matrix	Port	Description		
200M IP Extender	DC/5V HDMI - IN	5V power supply to the HDMI input ,connect I		
Transmitter	HDMI - OUT	HDMI output, connect	. ,	
0 0	Ethernet	Network interface by		
HDMI Receiver:				
CON NOMO. NOM OTHER				
HDMI° H.264 Matrix				
200M IP Extender	Port	Description		
Receiver	DC/5V HDMI -OUT	5V power supply to the HDMI output, connect		
~		Connect IR receiver Network interface by	cat5e/6	
		,		

Application diagrams

Application 1:

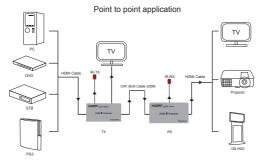

Application 2:

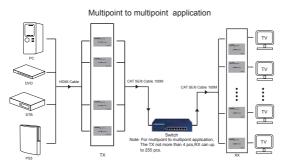

Application diagrams

HDMI 200M extender over IP is used in audio-visual conference, command and control center, ticketing platform, home theater, multi-media teaching, conference system and so on.



Audio-visual conference





Home theater



School



Community monitoring

Connection and operation

- 1) Connect the HDMI source to the HDMI Transmitter with HDMI cable
- 2) Connect the HDMI receiver to the HDTV display with HDMI cable.
- 3) Use one Cat5e/6 cable up to 200m to connect the Sender and Receiver.
- 4) Connect the "IR receiver "into "IR-TX" port on transmitter, and "IR transmitter" into the "IR-RX" on receiver, and make sure the IR transmitter aim at IR receiver of the controlled device if you need the IR control function.
- Connect two pieces of 5V power supply to the transmitter and receiver, power supply to the equipment and the LED indicator light on. When status lamp on and flicker. equipment starts normal.
- 6) Multipoint to multipoint match setting; when many TX and many RX connect to the swith, the extender can be matched after set up on the Wed browser.

The Package contents:

1. Transmitter 1PCS

2 Receiver 1PCS

2. 5V/1A Power adapter 2PCS

3. IR cable 1Pair

4 User's Manual 1PCS