


Rear View

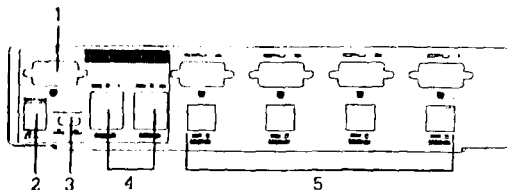

1 Console Video Connector

The Monitors video cable plugs in here.

2 Power Jack

If you choose to connect an external DC 5v Power Adapter, it's power cable plugs in here

3 Scan Time selection switch

This slide switch selects the amount of time the CS-104U dwells on each port (3 seconds. or 15 seconds). when Auto Scan Mode is in effect

4 USB Ports for the Console Mouse and Keyboard, and USB peripheral devices

Plug the peripherals into any of the ports.

Note: The drivers for most USB devices (CCD Cameras,

scanners Printers, e.g.), are required to be shut down before you disconnect the device, or else the system may crash. When you switch computers with the Port Selection Switch, it is the equivalent of disconnecting the device. Therefore, if you have peripheral devices (other than a second keyboard and mouse) connected to these ports, you must be sure to shut down the USB drivers for them before switching computers


5 CPU Port Section

Cables that link the CS-104U to the computers plug in here See the installation section for details.

Installation

Before you begin, *make sure that power to all the devices you will be connecting up (Master View CS-104U the monitor and the connected computers have been turned off.*


1. Plug the **monitor keyboard, and mouse into the Console port connectors** of the Master View CS-104U unit
- 2 If you choose to use an external **5V power adapter, plug the adapter into an AC source, then plug the adapter cable into the unit's Power Jack.**
- 3 Use the video extender cables to connect the **CS-104U's video ports to the video ports** on the corresponding computers, as shown in the diagram below
- 4 Use standard USB cables to connect from the CS-104U's USB ports (B connector) to the USB ports on the corresponding computers (A connector as shown in the diagram below.

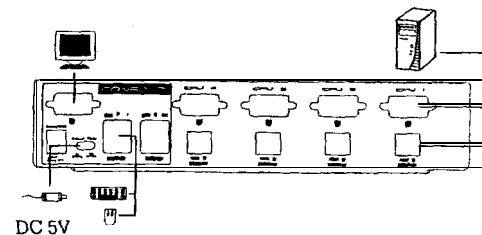

Note: The CS-104U's Power On default IS to link to Port 1. If the computer attached to Port 1 is inactive the monitor will be blank so It may appear as if the unit is not functioning This is not the case Simply press the Port Selection Switch (located on the unit's right panel), to switch to an active Computer on one of the other ports.

Introduction

Front View:

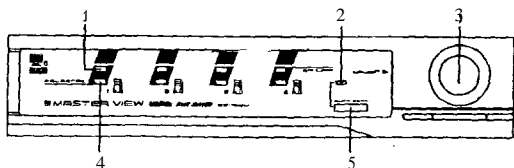

- 1 Selected LEDs.
Lights to indicate the currently selected port
- 2 Auto Scan LED
The Auto Scan LED flashes when **Auto Scan Mode** is in effect
- 3 Port Selection Switch
The Port Selection Switch is located on the right panel, Just opposite the Select Arrow on the front panel. Press this pushbutton to cycle among the connected computers to select the active port. The Selected LED on the front panel lights to indicate which port is selected.
4. On Line LEDs
Lights to indicate that a computer is properly connected to the Port. and that It is powered up and operational
5. Auto Scan Switch
Press this pushbutton In, to turn **Auto Scan Mode On**. Press It again to pop the button out. to turn Auto Scan Mode Off