

USER MANUAL

HDMI Video Capture

Enjoy the vivid world!

INTRODUCTION

The video capture can capture both HDMI video and HDMI audio, sending audio and video signals to computers and smart phones for preview and storage. Suitable for high definition acquisition, teaching recording, medical imaging, etc.



Features:

- * Support input max resolution 4K@30Hz;
- * Support output max resolution 1080P@60Hz;
- * Support 24/30/36bit deep color:
- * Support AWG26 HDMI standard cable: input up to 15 meters, (1080P and below resolution);
- * Support most acquisition software, such as VLC, OBS, Amcap, etc.
- * Support Windows Android and MacOS;
- * Conform to USB Video and UVC standard;
- * Conform to USB Audio UAC standard:
- * Without external power supply, compact and portable.

Specifications:

Support video format	24/30/36bit Deep color
Video output format	YUV、JPEG
Video output resolution	Max output can be 1080P
Support audio format	L-PCM
Input cable distance	≤15m,AWG26 HDMI standard cable
Max working current	0.2A/5VDC
Operating Temperature range	(-10 to +55°C)
Dimension (L x W x H)	52x25x14 (mm)
Weight	15.6g

. Max input can be 4K

HDMI resolution

Application diagrams





Connection and Operation

- Connect the UHD signal source to the HDMI input of the video capture with one HDMI cable.
- 2: Connect the computer to the usb port of the video capture with usb cable.
- Operation steps for USB video capture(OBS): Open the software→Choose sources of "Video capture Device"→Set the size of image→Choose "Studio Mode"(double window) →Choose "Start Recording".
 - Operation Example as below
- 1. Add new sources, choose "Video Capture Device"/ "Audio Input Capture"





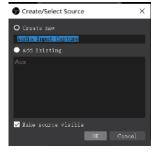

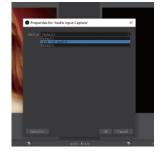

2. Set the size of the image.



3. Choose "Studio Mode" (double window).





4. Click "Start Recording"





Note:

Computer hardware configuration requirements
CPU: PC i5-3400 or above; NB i7-3537U 2.0GHZ or above
Graphics card: PC NVIDIA GT630 or above; NC NVIDIA GT735M or above
Run memory: 4G RAM

Package include

1. Video capture 1PC 2. User Manual 1PC